


Linear actuator for adjusting air dampers and slide valves in ventilation and air conditioning systems in buildings

- For air dampers up to approx. 1.3 m²
- Actuating force 200 N
- Nominal voltage AC/DC 24 V
- Control: Open-close (not made for 3-point applications)
- Length of stroke max. 100 mm, adjustable in 20 mm-steps
- Running time 7 s

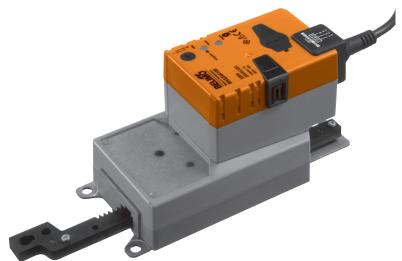

Technical data				
Electrical data	Nominal voltage		AC 24 V, 50/60 Hz / DC 24 V	
	Nominal voltage range		AC 19.2 28.8 V / DC 21.6 28.8 V	
	Power consumption	<u> </u>	13 W @ nominal torque 2 W	
	For wire sizing		23 VA (I max. 20 A @ 5 ms)	
	Connection		Cable 1 m, 3 x 0.75 mm ²	
Functional data	Actuating force		Min. 200 N @ nominal voltage	
	Direction of stroke		Reversible with switch 1₹ resp. 0 ±	
	Manual override		Gearing latch disengaged with pushbutton, can be locked	
	Stroke adjustment		40 100 mm, adjustable in 20 mm-steps, can be limited at both ends with mechanical end stops	
	Stroke limiting		Min. 40 mm	
	Running time		7 s / 100 mm	
	Automatic adjustment of operating range to match the mechanical stroke adjustment		Manual triggering of the adaption by pressing the «Adaption» button	
	Sound power level		52 dB (A)	
	Negative torque	<u>/1</u>	≤50% from nominal torque (Caution: can only be used with restrictions. Please contact your Belimo representative.)	
Safety	Protection class		III Safety extra-low voltage UL Class 2 Supply	
	Degree of protection		IP54 in any mounting position NEMA 2, UL Enclosure Type 2	
	EMC		CE according to 2004/108/EC	
	Certification		Certified to IEC/EN 60730-1 and IEC/EN 60730-2-14 cULus according to UL 60730-1A and UL 60730-2-14 and CAN/CSA E60730-1:02	
	Mode of operation Rated impulse voltage Control pollution degree		Type 1	
			0.8 kV	
			3	
	Ambient temperature	9	-30 +40 °C (no restrictions)	
	·	Δ	440 +50°C (Caution: can only be used with restrictions. Please contact your Belimo representative.)	
	Non-operating temperature Ambient humidity		-40 +80°C	
			95% r.H., non-condensating	
	Maintenance		Maintenance-free	
Dimensions / Weight	Dimensions		See «Dimensions» on page 4	

Approx. 1.25 kg

Weight



Safety notes



- The actuator is not allowed to be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- It may only be installed by suitably trained personnel. Any legal regulations or regulations issued by authorities must be observed during assembly.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · The cable must not be removed from the device.
- The rotary supports and coupling pieces available as accessories must always be used if lateral forces are likely. In addition, the actuator must not be tightly bolted to the application. It must remain movable via the rotary support (refer to «Assembly notes»).
- If the linear actuator is exposed to severely contaminated atmosphere, appropriate
 precautions must be taken on the system side. Excessive deposits of dust, soot etc. can
 prevent the gear rack from being extended and retracted correctly.
- If not installed horizontally, the gear disengagement pushbutton may only be actuated when there is no pressure on the gear rod.
- To calculate the actuating force required for air dampers and slide valves, the specifications supplied by the damper manufacturers concerning the surface, cross section, design, installation site and the air flow conditions must be observed.
- If a rotary support and/or coupling piece is used, losses in the actuation force losses are to be expected.
- Adaptation is necessary when the system is commissioned or whenever the stroke limiting is adjusted (press the adaption pushbutton once).
- The device contains electrical and electronic components and is not allowed to be disposed
 of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Simple direct mounting

The actuator can be directly connected with the application using the enclosed screws. The head of the gear rod is connected to the moving part of the ventilation application individually on the mounting side or with the Z-KS1 coupling piece provided.

Manual override

Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked).

Adjustable stroke

The stroke of the gear rack can be adjusted on both sides in increments of 20 mm by means of mechanical end stops.

A minimum permissible stroke of 40 mm must be allowed for.

High functional reliability

The actuator is overload-proof, requires no limit switches and automatically stops when the end stop is reached.

Home position

The first time the supply voltage is switched on, i.e. during initial startup, the actuator carries out an adaptation. After pressing the "gear disengagement" pushbutton, the actuator moves to the home position at the end stop.

P	Pos. Direction of stroke		Home position	
	1	0	extended	
		1	retracted	

The actuator then moves into the position defined by the control signal.

Adaption and synchronisation

During adaptation, the upper and lower spindle end stop is recorded and deposited in the actuator. Detection of the mechanical end stops enables a gentle approach to the end positions and thus protects the actuator mechanism.

During synchronisation, the actuator moves to the home position for referencing. This ensures correct position regulation.



Accessories

Mechanical accessories


Description	Data sheet
Rotary support to compensate lateral forces Z-DS1	T2 - Z-SHA
Coupling piece Z-KS1	T2 - Z-SHA
End stop set Z-AS1	T2 - Z-SHA

Electrical installation

Wiring diagram

Note

- Connect via safety isolation transformer.
- Parallel connection of other actuators possible. Note performance data for supply.

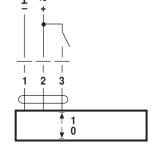

Direction of stroke



Cable colours:

1 = black 2 = red

3 = white

Assembly notes

Caution

be expected.

Application without transverse forces

The linear actuator is screwed directly to the housing at three points. Afterwards, the head of the gear rod is fastened to the moving part of the ventilation application (e.g. damper or slide valve).

Application with transverse forces

The coupling piece with the internal thread (Z-KS1) is connected to the head of the gear rod. The rotary support (Z-DS1) is screwed to the ventilation application.

Afterwards, the linear actuator is screwed to the previously mounted rotary support with the enclosed screw. Afterwards, the coupling piece, which is mounted to the head of the gear rod, is attached to the moving part of the ventilation application (e.g. damper or slide valve).

The transverse forces can be compensated for to a certain limit with the rotary support and/or coupling piece. The maximum permissible swivel angle of the rotary support and coupling piece is 10° , laterally and upwards.

Operating controls and indicators

If a rotary support and/or coupling piece is used, losses in the actuation force losses are to



1 Direction of stroke switch

Switching over: Direction of stroke changes

2 Push-button and green LED display

Off: No voltage supply or fault

On: In operation

Press button: Switches on stroke adaption, followed by standard operation

(3) Push-button and yellow LED display

Off: Standard operation

On: Adaptation or synchronising process active

Press button: No function

4 Gear disengagement switch

Press button: Gear disengaged, motor stops, manual override possible

Release button: Gear engaged, synchronisation starts, followed by standard operation

Check voltage supply connection

a) 2 Off and 3 On

Check the supply connections.


b) 2 Blinking and 3 Blinking

Possibly **±** and **∓** are swapped over.



Dimensions [mm]

Dimensional drawings

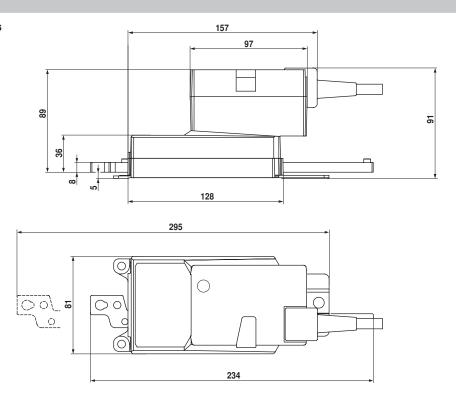



70751-00005.A

